

MAINTENANCE PROCEDURES

Lightning Lockers Heavy Duty Sheet Metal Lockers

ANNUAL INSPECTION AND MAINTENANCE

- Clean interior and exterior of lockers with mild detergent followed by clean water rinse and towel dry
- Tighten loose hardware on body and hooks with 3/8" hex nut driver or replace rivet with hand rivet tool.
- Tighten loose hardware on handle assembly with ¹/₄" hex nut driver or replace rivet with hand rivet tool.
- Adjust door jambs on frame member if door does not latch properly with plier or hand rivet tool. Adjust downward if door hangs up and upward if fails to latch.
- Straighten lockbar pins in door channel if bent. Not applicable to Single Point Latch lockers.

Replacement parts can be purchased from: Lightning Lockers 1119 water Street Toledo, Ohio 43604 USA (800) 497-6895

NOTE: Retain installation drawings and shipping bills of material for reference when ordering replacement parts.